ALPINE AGITATED BALL MILL ANR-CL

WET PROCESSING FINE SLURRIES






HOSOKAWA ALPINE



WET GRINDING WITH THE AGITATED BALL MILL ANR-CL



The ANR-CL is designed for the cost-efficient ultrafine grinding of highly concentrated limestone slurries.

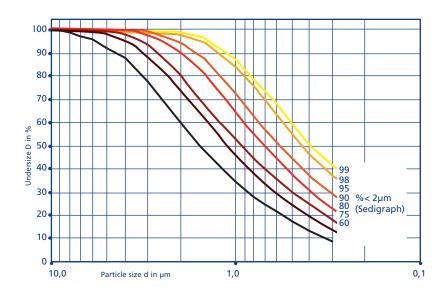

PRINCIPLE OF OPERATION

The operating mode and the design permit the production of extremely high qualities with regard to fineness, degree of whiteness and abrasiveness. The mill design ensures lowmaintenance continuous system operation with no expensive downtime periods.

The flow pattern through the vertically configured ANR-CL is from bottom to top, whereby the feed material is ground to the required end fineness with the aid of ceramic grinding beads. The grinding beads are separated from the discharging suspension by means of a low-maintenance combination of mechanical and dynamic classifier at the mill head.

The agitator ensures an exceedingly lowenergy grinding process at low wear rates and high mill service life. The agitator elements and the grinding chamber wall are made of wear-resistant hardened materials. An efficient cooling of the mill stator removes the heat generated during grinding. The geometry of the mill permits trouble-free scale-up to high productionscale capacities. The product line includes small laboratory machines of 15 kW as well as production-scale mills up to the MW range.

PROCESS

The powder is mixed with water and the requisite liquefier to a homogeneous slurry. The ANR-CL is charged continuously from the supply bin. After exiting the mill, the product is routed via a safety screening machine to a control bin where the product quality is monitored on an ongoing basis. The finish-ground suspension is then routed to large-volume storage tanks, from where

it is either transported directly to the end user or to a drying stage in a continuous micron drying system.


If the wet grinding system consists of several stages, a stirred intermediate bin with water cooling is installed between the individual grinding stages. System control can also be fully automatic if required.





GCC fillers and coating pigments from ANR-CL-CL grinding systems

60% < 2 μm	45	kWh/t
90% < 2 μm	105	kWh/t
98% < 2 μm	180	kWh/t
Slurry concentration	70 - 78	Weight%
Viscosity	150 - 300	mPas
Feed size	99,9 % < 45	μm

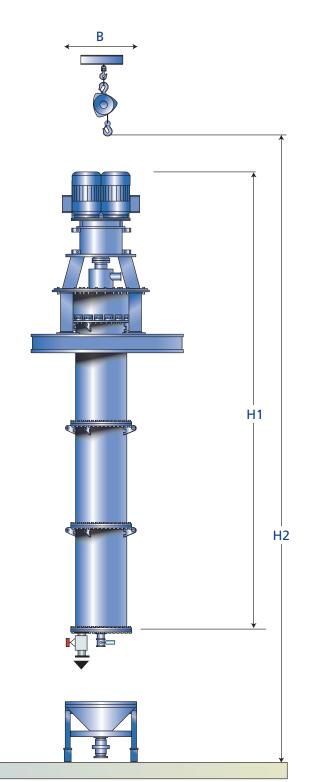



DRIVE CONCEPT


The ANR-CL has a simple drive concept that uses 4 individual motors to drive the rotor via a common gear wheel. The drive can also be operated with only 3 motors. If one motor fails, the mill is still capable of producing. And the spare parts costs are less because instead of a 1000-kW motor, only one of the 250-kW motors needs to be exchanged. The drive can also be operated quite economically using 4 x 250 kW frequency converters.

Туре		250 ANR-CL	500 ANR-CL	630 ANR-CL	710 ANR-CL	800 ANR-CL	900 ANR-CL	1000ANR-CL	
Installed drive power	kW	15	110	220	315	480	630	1000	
Machine height H1	approx. mm	2500	4600	5900	6700	8200	8800	9400	
Installation height H2	approx. mm	3300	7000	8500	9500	11200	12000	12800	
Width B	approx. mm	510	1000	1300	1450	1500	1850	2050	
Production data calcium	roduction data calcium carbonate (CaCO ₃ of average grindability)								
Fineness 60% < 2µm	approx. kg/h **	240	1800	3700	5200	8200	10400	16600	
Fineness 90% < 2µm	approx. kg/h **	100	750	1500	2200	3400	4300	6900	
** kg/h of dry material								on request	

SYSTEM EXAMPLE MINERAL SUSPENSIONS





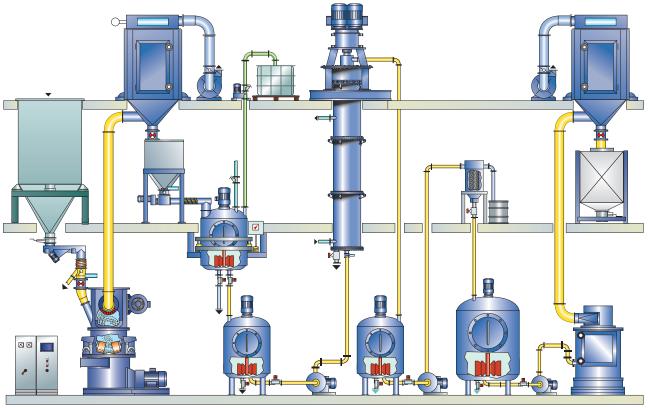

PROCESS TECHN

WET GRINDING LOW-VISCOSITY SUSPENSIONS


The system shown is designed for a classic application, i.e. for grinding superfine calcium carbonate slurries for the paper industry. The suspension is prepared in the mixing bin and introduced via a feed bin to the mill by means of an eccentric screw pump. The safety screen prevents coarse contaminants from ingressing the end product. Preliminary dry milling with an Alpine table roller mill AWM is shown as an option. For other mineral powder applications, an impact drying step is added to the wet milling step. We offer different electric monitoring options for all our system concepts.



SATELLITE SYSTEMS



The ANR-CL-CL agitated ball mill can be integrated into industrial production processes in a number of ways.

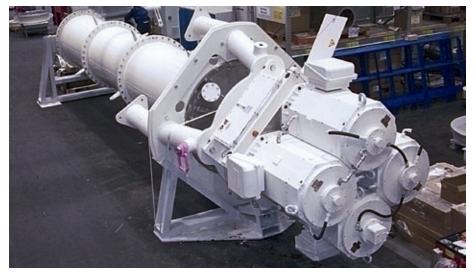


The possibilities range from a stand-alone machine to a fully automatic turnkey system. The user can be either the mineral powder producer or the end user himself. Especially in the case of the paper industry, the great variety of mineral applications can make a universal processing system advantageous. Located right next to the paper mill, such a

satellite system can be adapted at any time to suit the specific requirements of the paper production process. And because on-the-spot preparation of the coating pigments and fillers is possible in precisely the quality and with the solids concentrations required by the user, considerable savings in terms of liquefier and additives can be made.

ADVANTAGE OF THE SATELLITE SYSTEM CONCEPT

- Maximum flexibility in adapting the mineral powder slurry to the paper production process
- No transport necessary
- The resultant slurry can be routed directly to the paper mill without drying
- Maximum dispersing quality brought about by just-in-time processing
- No re-agglomeration
- No preservatives necessary
- No constraints regarding delivery contracts and raw materials availability
- Cheaper raw materials
- Self-made recipes with self-selected additives
- Lower additives requirement brought about by optimum adaptation to the paper process
- Rapid reaction to market changes possible
- Advance testing of future trends

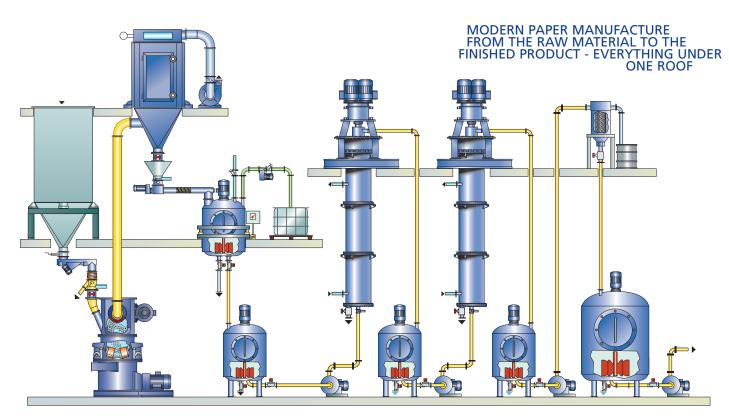

APPLICATION TEST CENTRE

Alpine's application testing centre offers unique facilities for carrying out customer trials aimed at finding the best possible system design and at determining the technical warranty parameters. Tests are carried out both on a production scale and a pilot scale.

Spread over approx. 3000 m², the application testing centre provides ample space for execution of all the basic operations of mechanical and thermal process technology,

- Size reduction (dry and wet)
- Granulator technology / shredding
- Air classification
- Wet classification
- Sieving, separation
- Mixing, drying, flash drying
- On-line (i.e. direct at the grindingclassifying system) particle size analysis of dry powders in the range 0.5 - 850 μm .

technology also means being on the receiving end of our customer service, the scope of which includes detailed test reports containing all the relevant testing data and parameters.

With over 60 machines and complete systems, ALPINE's application testing centre is ideally equipped to meet every customer testing requirement. Annexed to the testing centre is a laboratory equipped with numerous state-of-the-art measuring and testing units for determination of powder properties. All system operating data can be recorded. This enables seamless documentation of the test results that are submitted to the customer.

Taking advantage of ALPINE's application Test systems must always be state of the art if optimum scale-up data are to be delivered. Our plant and machinery is renewed on an ongoing basis and is constantly supplemented with newly developed machines.

> Special features of the testing centre:

- Selected systems used for size reduction and classification in the fine and ultrafine range are protected against dust explosions.
- Oil-free and water-free compressed air.
- Hot-gas operation.
- Cryogenic operation with LN2 to -80°C operating temperature.
- Contamination-free processing trials carried out with special systems for ultrafine comminution and air classification.
- Grinding-classifying circuit mode, e.g.: closed circuit between ball mill and ultrafine classifier; open product circuit between impact mills and sieving machines, air classifiers.







HOSOKAWA ALPINE Aktiengesellschaft

P.O. Box 10 11 51 86001 Augsburg GERMANY

Address for visitors and deliveries:

Peter-Doerfler-Str. 13 – 25 86199 Augsburg

GERMANY

Tel.: + 49 821 5906-0 Fax: + 49 821 5906-610

E-mail: minerals@alpine.hosokawa.com

www.alpinehosokawa.com

Subject to change without notice.
All information in this brochure is purely informative and non-binding.
Our quotations are authorative with regard to orders.



HOSOKAWA ALPINE Aktiengesellschaft

Hosokawa Alpine is a member of the Hosokawa Micron Group, responding to global needs through emphasis on materials science and engineering. The Group is an international provider of equipment and technology for powder and particle processing, plastics processing and confectionery products. The Group maintains facilities for research, engineering, manufacturing and service in each of the world's major industrial markets.