


Baby Food Manufacturers Can Suck it and See For Themselves

Baby food production is as easy as ABC with the Hosokawa Rietz RA Angle Disintegrator, a unique mill which ejects non-friable or reject materials to produce a smooth, creamy and non gritty product suitable for babies and juniors.

The Hosokawa Rietz RA Angle Disintegrator, from UK based Hosokawa Micron Ltd. is ideal for companies wishing to produce a range of baby food products of different consistencies as well as volume producers. Its unique secondary discharge allows the continuous removal of skin and fibres from products which may cause infants to choke and is highly suited for raw, blanched or cooked fruits and vegetables such as squash, pumpkin, carrots, apples and peaches. As fruit and vegetable peeling is eliminated, there is less wasted product and the quality of the baby food purÇe is enhanced.

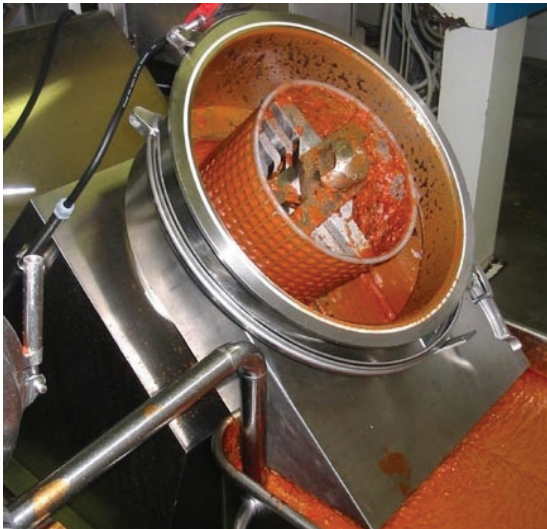

The Angle Disintegrator generates coarse to fine textured purÇes from dry or soaked, hot or cold ingredients.

Cooked and de-fatted meats for inclusion in baby foods can also be successfully ground using the Hosokawa Rietz RA Angle Disintegrator which would normally be fitted with 0.8 to 0.6mm screens for the final pass to generate the desired smooth product suitable for first solid, infant foods.

The Angle Disintegrator is designed for hygienic applications and incorporates fast cover opening and a stainless steel construction for easy cleaning with all moving parts completely accessible for inspection. The construction with easy to remove hammers and screens allows for fast product changeover without cross-contamination and enables a range of products to be produced using a single piece of equipment. Ideally suited to continuous blending or mixing, there is provision for water or steam injection during operation keeping product transfers and production times to a minimum.

Hosokawa Micron Ltd's experience working with purÇe manufacturers means they can offer either turnkey processing solutions and packages or stand alone machines. The company also offers a 'try before you buy' policy and will undertake product tests for clients to establish the right Angle Disintegrator for their individual application.